

TABLE OF CONTENTS

FOREWORD	1
SYSADMIN OPTIONS.....	3
CHAPTER 1 SYSADMIN INTRODUCTION	5
1.1 THE JMCIS SYSTEM.....	6
1.1.1 INSTALLATION CONFIGURATIONS	6
1.1.2 JMCIS FUNCTIONALITY.....	7
1.2 ADDITIONAL SOURCES OF INFORMATION	7
CHAPTER 2 SYSTEM ENVIRONMENT	9
2.1 HARDWARE COMPONENTS	9
2.1.1 TAC-3/4 HARDWARE	9
2.1.2 RSC GRAY BOX COMPONENTS	10
2.1.3 SPARC 10/20 HARDWARE.....	10
2.2 MULTI-MONITOR CONFIGURATIONS.....	11
2.3 THE JMCIS OPERATING SYSTEM (OS)	12
CHAPTER 3 OPERATING GUIDELINES	15
3.1 POWER DOWN	15
3.2 POWER UP	15
3.3 DATABASE SIZE LIMITS	16
CHAPTER 4 SYSTEM ADMINISTRATION UTILITIES.....	21
4.1 SYSTEM MENU	21
4.1.1 FIND LAUNCH	22
4.1.2 STOP PROGRAM.....	22
4.1.3 PRINT SCREEN	23
4.1.4 SELECT PRINTER.....	24
4.1.5 SYSTEM STATUS.....	24
4.1.6 RESTART	25
4.1.7 POWER DOWN	25
4.1.8 CLOSE ALL	26

4.1.9 LOGOUT.....	26
4.2 HARDWARE MENU	26
4.2.1 SHUTDOWN SYSTEM	26

TABLE OF CONTENTS - Continued

4.2.2 REBOOT SYSTEM.....	26
4.2.3 DISK MANAGER.....	26
4.2.4 CONFIG PRINTER	28
4.3 SOFTWARE MENU	31
4.3.1 SEGMENT INSTALLER	32
4.3.2 INSTALLATION SERVER	36
4.3.3 ARCHIVE NET SERVER DATA.....	36
4.3.4 RESTORE NET SERVER DATA	37
4.3.5 ENABLE GENBROADCAST	37
4.3.6 DISABLE GENBROADCAST.....	37
4.3.7 ADDING A NEW NIS + CLIENT (SOLARIS ONLY).....	37
4.4 DATABASE MENU	39
4.4.1 ARCHIVE JMCIS DATA	40
4.4.2 RESTORE JMCIS DATA.....	41
4.4.3 CLEAN DATAFILES	42
4.5 NETWORK MENU	43
4.5.1 CHANGE MACHINE ID	43
4.5.2 SET SYSTEM TIME.....	44
4.5.3 SET WAN UID	45
4.5.4 SET WAN DDN TIMEOUT	46
4.5.5 CONFIG DDN HOST TABLE.....	47
4.5.6 SET NIPS TDBM HOST	50
4.5.7 EDIT LOCAL HOSTS	50
4.5.7.1 ADD A MACHINE.....	53
4.5.8 SYSTEM CONFIGURATION.....	53
CHAPTER 5 COMMUNICATIONS.....	55
5.1 THE JMCIS NETWORK.....	55
5.2 INTERFACE DESCRIPTION	55
5.2.1 SERIAL INTERFACE: RS-232, RS 422, MIL-188	55
5.2.2 LAN INTERFACE: ETHERNET AND FIBER OPTIC CABLING.....	56

5.2.3 PROTOCOLS	56
5.3 PHYSICAL CONNECTIONS	56
5.3.1 SERIAL.....	56

TABLE OF CONTENTS - Continued

5.3.2 LAN.....	57
5.3.3 X.25.....	58
5.4 COMMUNICATION AND BROADCAST CONFIGURATION	58
5.4.1 STARTING COMMS CHANNELS.....	60
5.4.2 STARTING BROADCASTS.....	61
5.4.3 MESSAGE TRANSMISSION	61
5.4.4 MESSAGE AND BROADCAST HEADERS	62
5.5 STU III CONFIGURATION	62
5.5.1 PROCEDURES	63
5.5.2 CONFIGURING SPECIFIC STU-III MODELS.....	65
5.6 TROUBLESHOOTING COMMUNICATIONS PROBLEMS.....	66
5.6.1 HARDWARE PROBLEMS	66
5.6.2 SOFTWARE PROBLEMS	67
5.6.3 SPECIFIC CHANNELS AND INTERFACES	68
5.6.4 BROADCASTS	74
CHAPTER 6 ERROR RECOVERY	77
6.1 BASIC ERROR RECOVERY	77
6.2 PERFORMANCE TIPS.....	79
6.3 TROUBLESHOOTING MULTI-MONITORS.....	80
6.4 IDENTIFYING HARDWARE PROBLEMS.....	81
6.5 REPAIRING FILE SYSTEMS.....	81
6.6 TO REPORT A PROBLEM	81
SECMAN OPTIONS	83
CHAPTER 7: SECMAN INTRODUCTION	85
CHAPTER 8: SYSTEM MENU	87
8.1 SET MENU FONT	87
8.2 SYSTEM EXIT	88
CHAPTER 9: SECURITY MENU	91
9.1 AUDIT STATUS	91

9.1.1 ON/OFF BOX.....	92
9.1.2 GRANULARITY BOX.....	93
9.1.3 LOG SIZES BOX	93

TABLE OF CONTENTS - Continued

9.2 AUDIT LOG.....	93
9.3 OS AUDIT LOG.....	95
9.4 SECURITY ALERT LOG.....	96
9.5 ARCHIVE LOGS	98
CHAPTER 10: ACCOUNTS MENU	101
USER ACCOUNTS QUICK REFERENCE.....	101
10.1 VIEW ROLES.....	102
10.1.1 ADD ROLE	104
10.1.2 EDIT ROLE	105
10.1.2.1 ROLE HEADER Box	107
10.1.2.2 PERMISSIONS Box.....	107
10.1.2.3 MENU ACCESS Box.....	109
10.2 EXPORT ACCOUNTS AND ROLES	111
CHAPTER 11: PRINTING	115

TECHNICAL BULLETINS